


# MINI PC PCG35

**Quick Start Guide** 



Thanks for choosing MeLE

## Packing List

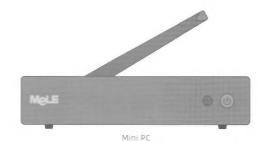














Power Adapter

Plugs are optional depend on the sales regions

Quick SSD Silicone Start Guide Rubber

### Interface

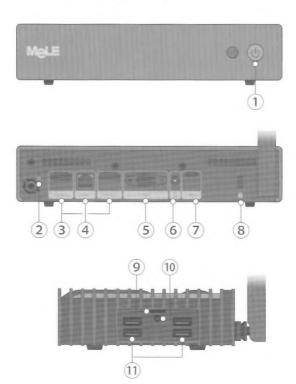


- 1 Power Button
- 2 Reset (CMOS Reset/BIOS Reset)
- 3 HDMI Port \*2
- 4 Gigabit Ethernet Port
- 5 VGA Port

- 6 Power input
- 7 USB Type- C
- 8 Kensington Lock Slot
- 9 Micro SD Card Slot
- 10 3.5mm Audio Combo Jack
- (11) USB 3.0 Ports \*4



#### How to Connect

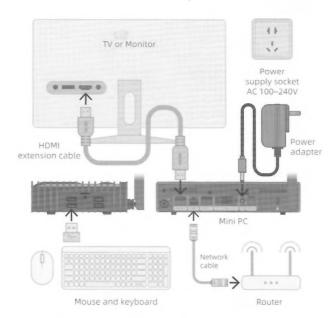

- 1.Connect the 12V power adapter to the Mini PC
- 2.Connect the Mini PC to a TV or monitor by HDMI extension cable
- 3. Turn on your Mini PC by pressing the power button
- 4. The LED indicator turns blue when you power on the Mini PC
- 5.Enjoy your Mini PC by connecting with keyboard and mouse

#### Install a M.2 SSD

- 1. Prepare a M.2 2280 SSD. And take off the four screws on the bottom panel to open the Mini PC.
- 2. Take off the screw on the PCBA
- 3. Install the M.2 SSD and fix the SSD with screw.
- 4. Put the silicone rubber on top of SSD for heat dissipation.
- 5. Fix the bottom panel with four screws

#### Enter into BIOS Setting

Press the power button and press F7 or Delete on Keyboard continuously to enter select boot device menu -> select Enter

#### Reinstall Windows 10

Please visit MeLE officall website->Forum(http://forum.mele.cn/) or contact us to get the install steps and download link of Windows 10 image and device driver.



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator &

Mele Technologies (Shenzhen) Co., Ltd. holds the right to improve the appearance, dimension, color and technology of the product without prior notice.

All images on the giftbox and guide are for reference only, the physical product in the giftbox might be

Adapter shall be installed near the equipment and shall be easily accessible. The operating temperature of the device between 0°C to 35°C.

We declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Manufacturer: MeLE Technologies(Shenzhen) Co., Ltd.

Address of Manufacturer: No.28 Cuijing Road, Pingshan District, Shenzhen (518118) P.R. China

Customer Email: meleservice@mele.cn

Website: www.mele.cn





